


Thermostats A Complete Guide









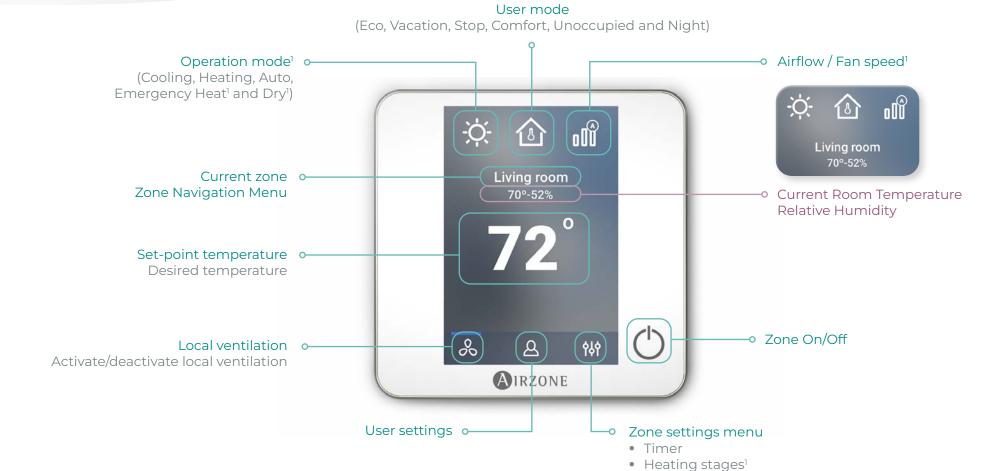

- Capacitive icons (touch screen) ———— Informative icons




• Lite Settings (access from Zone Navigation Menu)









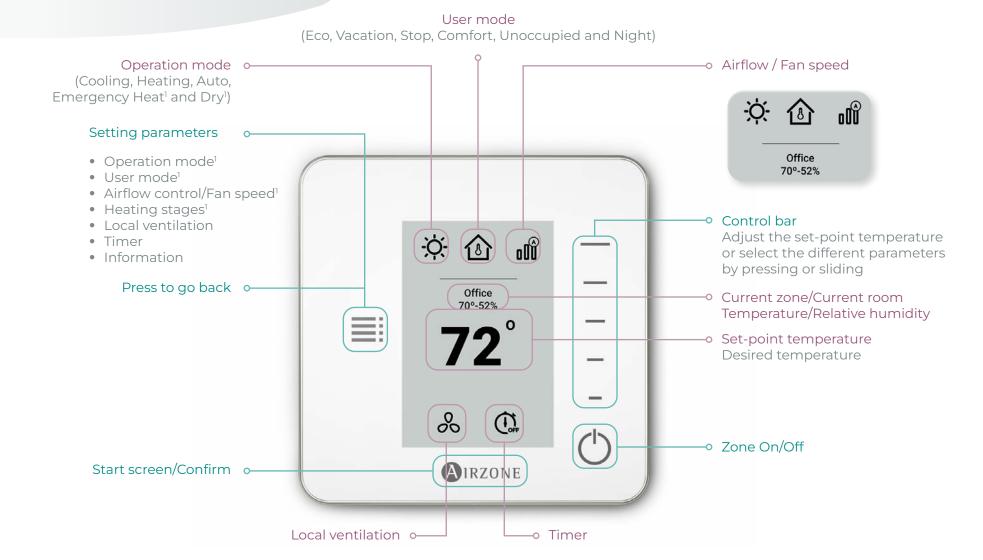



- Informative icons

Capacitive icons (touch screen)





Airzone Lite



If the status LED is steady

The zone in which the thermostat is located is on.

If the status LED is blinking

If the LED blinks slowly, it means that the zone in which it is located is off. It can be turned on again by pressing the LED or from remote zones.


If the LED blinks rapidly in red or purple, it means that there is an error. You can check this on the Airzone Blueface or using the Airzone Cloud арр.

If the status LED is off

The thermostat is in energy saving mode. In the case of the Airzone wireless Lite thermostat, this will happen by default. If it is a wired Lite thermostat, you can configure this parameter in Lite settings through remote zones from your Airzone Blueface thermostat or using the Airzone Cloud app.

The set-point temperature is the desired temperature.

The default base temperature is 73°F and configured from the Lite settings parameter through remote zones from your Airzone Blueface thermostat or using the Airzone Cloud app.

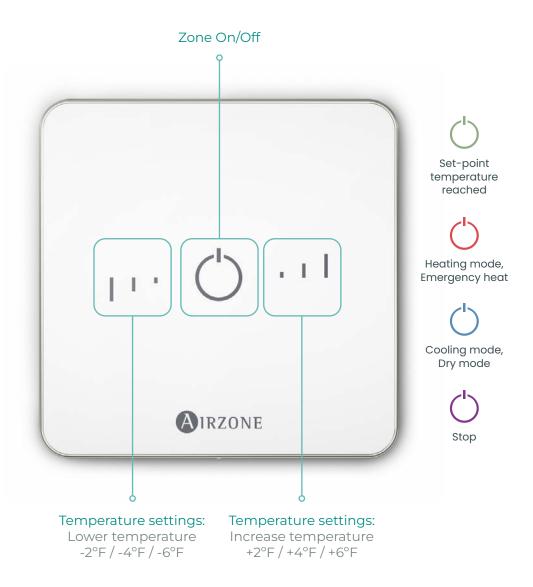







Airzone North America Corporation

airzonecontrol.com









MSTAZX6NSTNA02 | April 2025 Edition

The specifications in this catalog are valid except for typographical errors and may be subject to change without prior notice due to our continuous product improvement efforts. No part of this catalog may be reproduced without the express authorization of Airzone Clima S.L. The content of this catalog is the intellectual property of Airzone Clima S.L.