


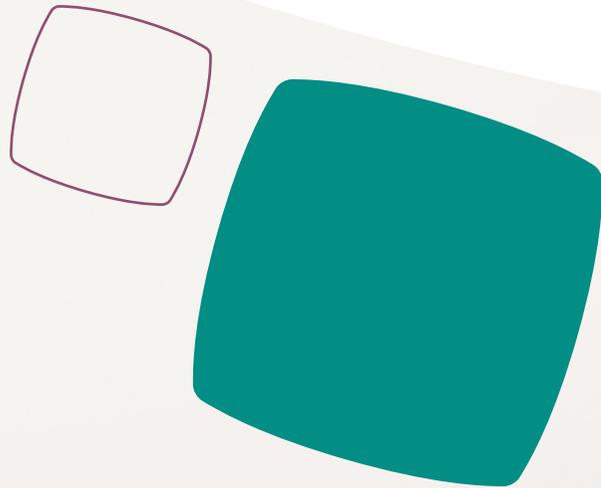

# Basic thermostat functions





# Airzone Blueface Zero



**Airzone Blueface Zero thermostat**  
with 3.5" capacitive display

✓ Flexa 3.0, Acuazone, RadianT365 and Easyzone IAQ systems

Available in:



- Sleep mode
- Anti-freezing
- Grille angle<sup>2</sup>
- Adjust slats (Only available for Acuazone systems)
- Control stages<sup>2</sup>
- Q-Adapt<sup>2</sup> (Not available for Acuazone systems)
- Lite settings (accessed via remote zones)
- Air purification<sup>3</sup>

— Capacitive icons (touch screen)      — Informative icons

<sup>1</sup>Options available depending on the configuration and/or the HVAC system

<sup>2</sup>Option not available for RadianT365

<sup>3</sup>Only available for Easyzone IAQ

For more information, you can consult the manuals at [www.airzonecontrol.com/support/](http://www.airzonecontrol.com/support/)


# Airzone Think



**Airzone Think thermostat**  
with 2.7" e-ink screen

✓ Flexa 3.0, Acuazone, RadianT365 and Easyzone IAQ systems

Available in:

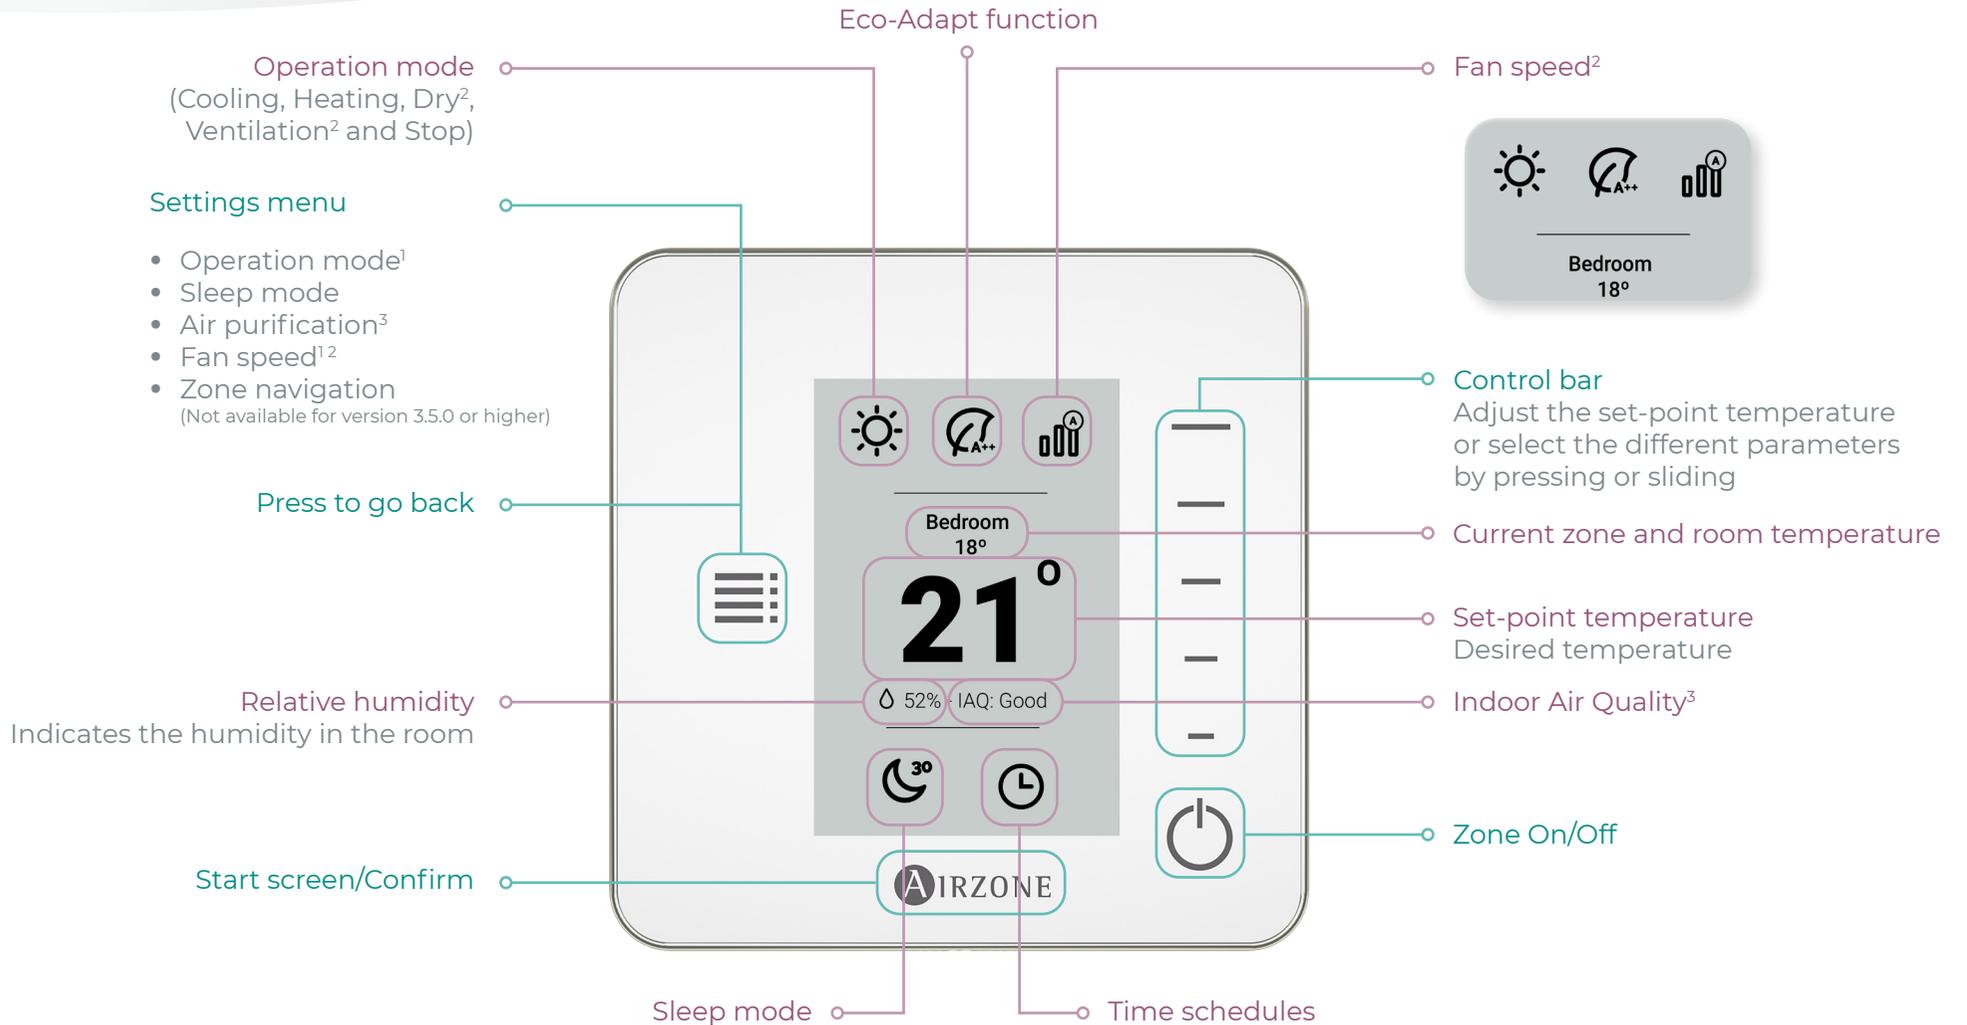

— Capacitive icons (touch screen)      — Informative icons

<sup>1</sup>Options available depending on the configuration and/or the HVAC system

<sup>2</sup>Option not available for RadianT365

<sup>3</sup>Only available for Easyzone IAQ

For more information, you can consult the manuals at [www.airzonecontrol.com/support/](http://www.airzonecontrol.com/support/)

# Airzone Lite



**Airzone Lite** thermostat with capacitive buttons and a LED RGB light code

✓ Flexa 3.0, Acuazone, RadianT365 and Easyzone IAQ systems

Available in:



## If the status LED is steady

The zone in which the thermostat is located is on.

## If the status LED is blinking


*If the LED blinks slowly*, it means that the zone in which it is located is off. It can be turned on again by pressing the LED or from remote zones.

*If the LED blinks rapidly* in red or purple, it means that there is an error. You can check this on the Airzone Blueface or using the Airzone Cloud app.

## If the status LED is off

The thermostat is in energy saving mode. In the case of the Airzone wireless Lite thermostat, this will happen by default. If it is a wired Lite thermostat, you can configure this parameter in *Lite settings* through remote zones from your Airzone Blueface thermostat or using the Airzone Cloud app.

The set-point temperature is the desired temperature. The default base temperature is 23°C and configured from the *Lite settings* parameter through remote zones from your Airzone Blueface thermostat or using the Airzone Cloud app.

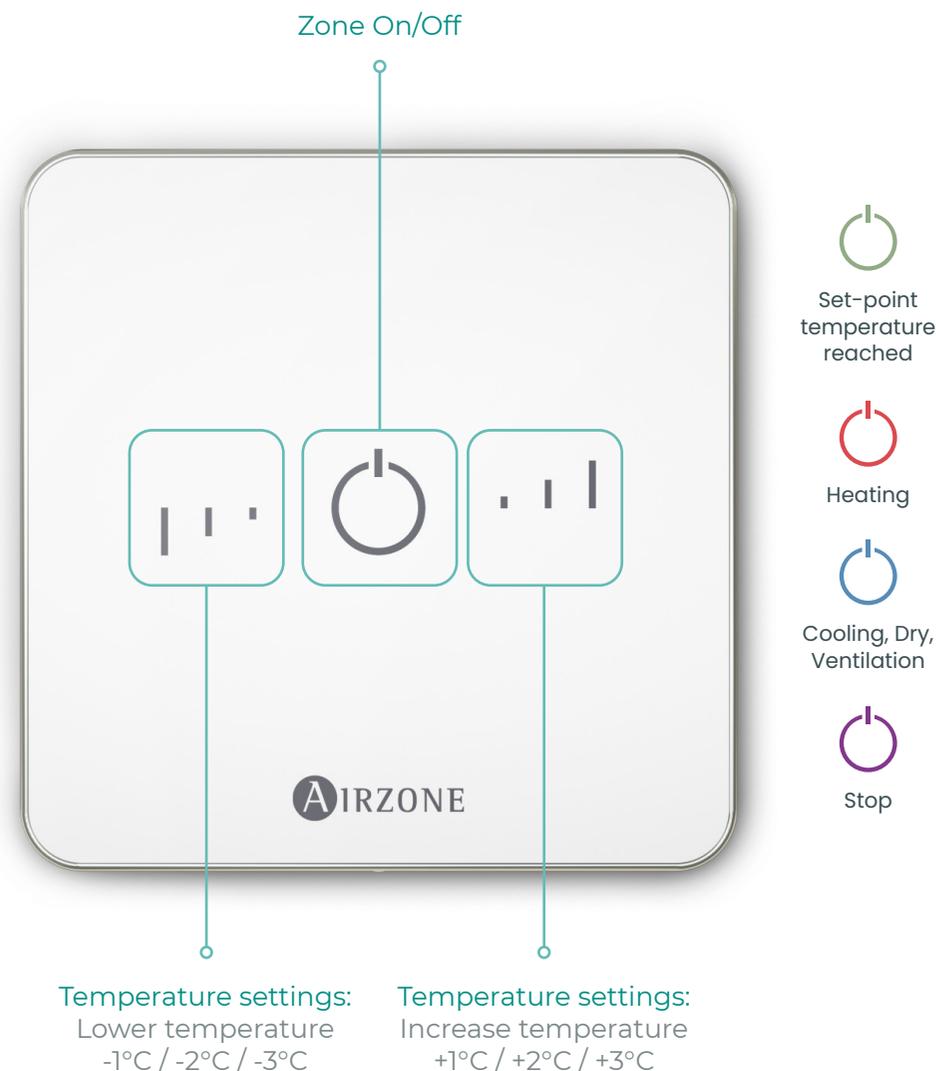

— Capacitive icons (touch screen)

For more information, you can consult the manuals at [www.airzonecontrol.com/support/](http://www.airzonecontrol.com/support/)



Parque Tecnológico de Andalucía  
Marie Curie, 21 · 29590 Málaga (Spain)

Platform for professionals [airzonecontrol.com/support](https://airzonecontrol.com/support)

+34 900 400 445

[airzonecontrol.com](https://airzonecontrol.com)



MSTAZX6NSTEU02 | March 2022 Edition

The specifications in this catalog are valid except for typographical errors and may be subject to change without prior notice due to our continuous product improvement efforts. No part of this catalog may be reproduced without the express authorization of Airzone Clima S.L. The content of this catalog is the intellectual property of Airzone Clima S.L.