

Hang Tabs Installation Instructions:

ACOUSTIC PANELS (Fabric, Image, & AcoustiColor®) ACOUSTICOLOR & ACOUSTIFELT™ TILES & SHAPES


Hang tabs are made of durable plastic with an adhesive backing that adheres to the back of the panels, and is secured with two screws. The tabs are then used to mount panels to a wall using our Easy, Standard, or Stacked installation methods. Typically, two hang tabs are used per panel, however, larger panels may require more.

Items needed: Hang tabs with included screws, a level, a pencil, and a Phillips head screwdriver.



Please note: For the Standard & Stacked Hang Tabs installation methods, you will also need a measuring tape.

Step 1: Position a panel on the wall. Use a level on the top of the panel.

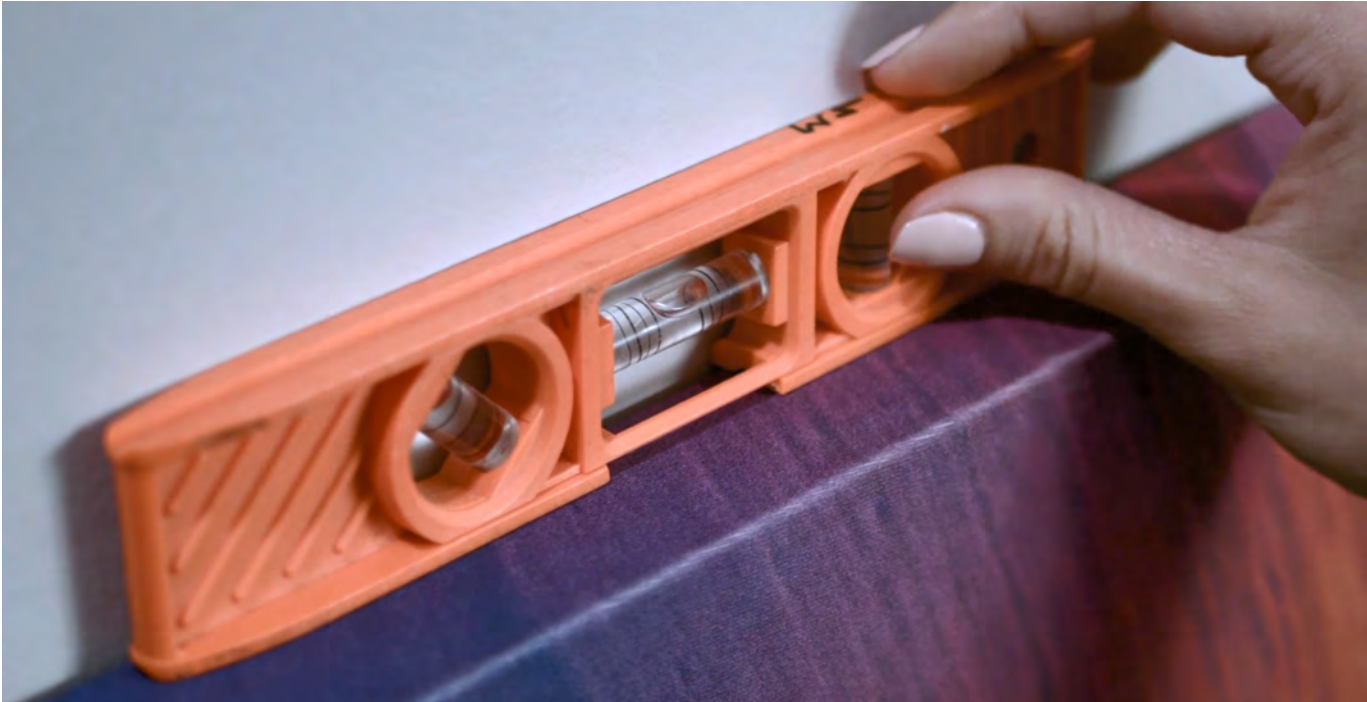


Step 2: Remove the level and lightly draw a line across the top of the panel with a pencil.



Easy Method:

Step 3: Screw the Walldog fasteners into the wall, just below the line. Make sure to leave a small 1/8" gap for the hang tab.

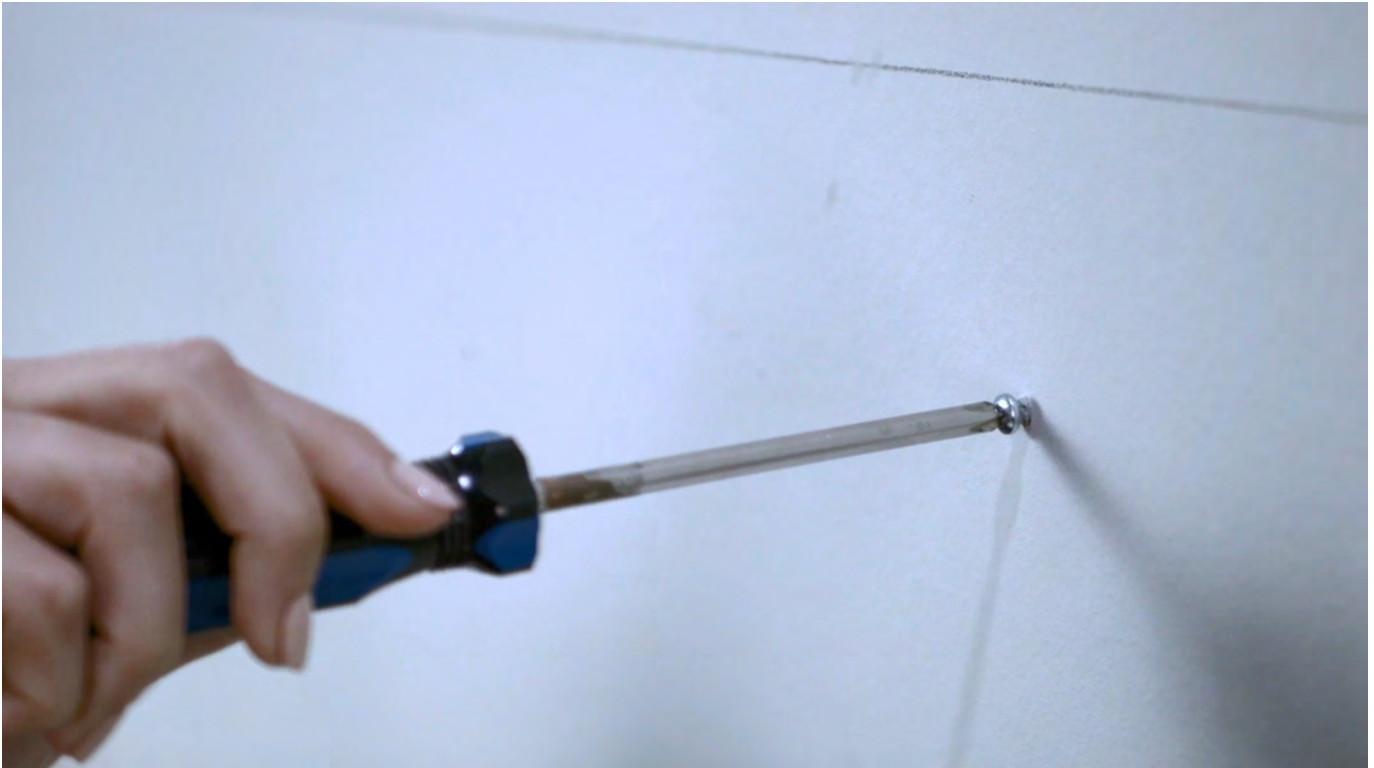


Step 4: Peel the wax backer off the hang tab, then place the tab over the screw on the wall with the sticky side facing out.



Easy Method Continued:

Step 5: Position the panel firmly into place on the wall and apply pressure to the locations of the hang tabs, so the hang tabs stick to the back of the panel.

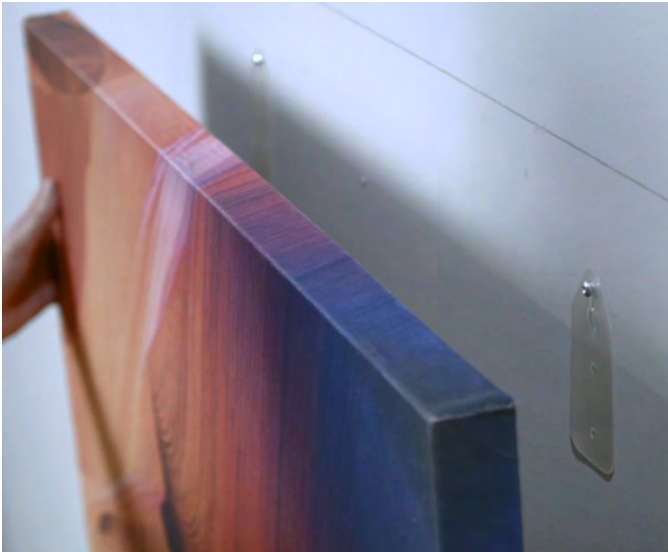

Step 6: Remove the panel by lifting up and out from the keyholes on the tabs.




Easy Method Continued:

Step 7: Secure the hang tabs on the back of the panel with the small screws provided.



Step 8: Hang the panel on the wall, like you would a wall clock, sliding the keyholes over the screws and it will be positioned precisely where you want it.

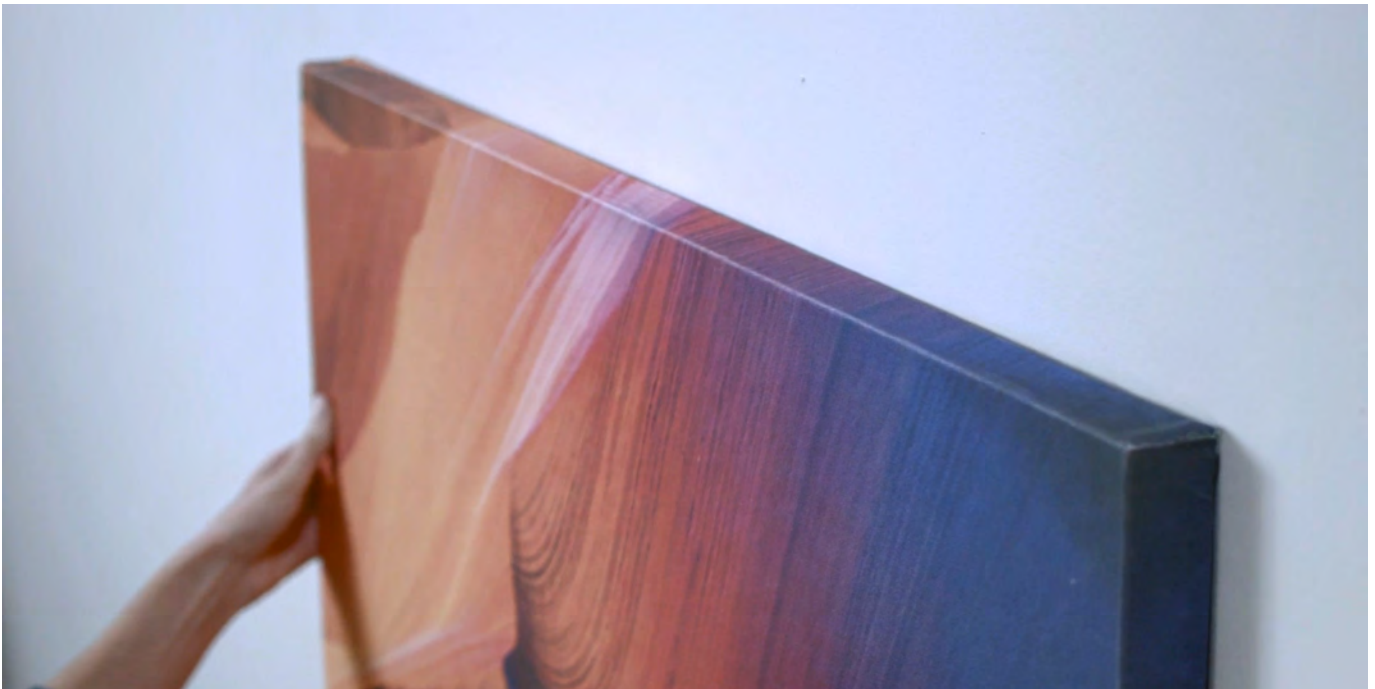

Standard Method (measuring tape required):

Step 3 (see page 2 for steps 1 & 2): Peel the wax backer off the hang tabs, then place the hang tabs sticky side down on the back of the panel, and secure the tabs with the small screws provided.



Step 4: Measure the distance between the keyholes on the hang tabs and from the top of the keyholes to the top of the panel.



Standard Method Continued:

Step 5: Apply the same measurements taken in Step 4 to the wall, using the line created in Step 2 as a reference to the top of the panel. Mark the locations of where the keyholes will be on the wall with a pencil.




Step 6: Screw the Walldog fasteners into the wall, just below the line. Make sure to leave a small 1/8" gap for the hang tabs.



Standard Method Continued:

Step 7: Hang the panel on the wall, like you would a wall clock, sliding the keyholes over the screws.

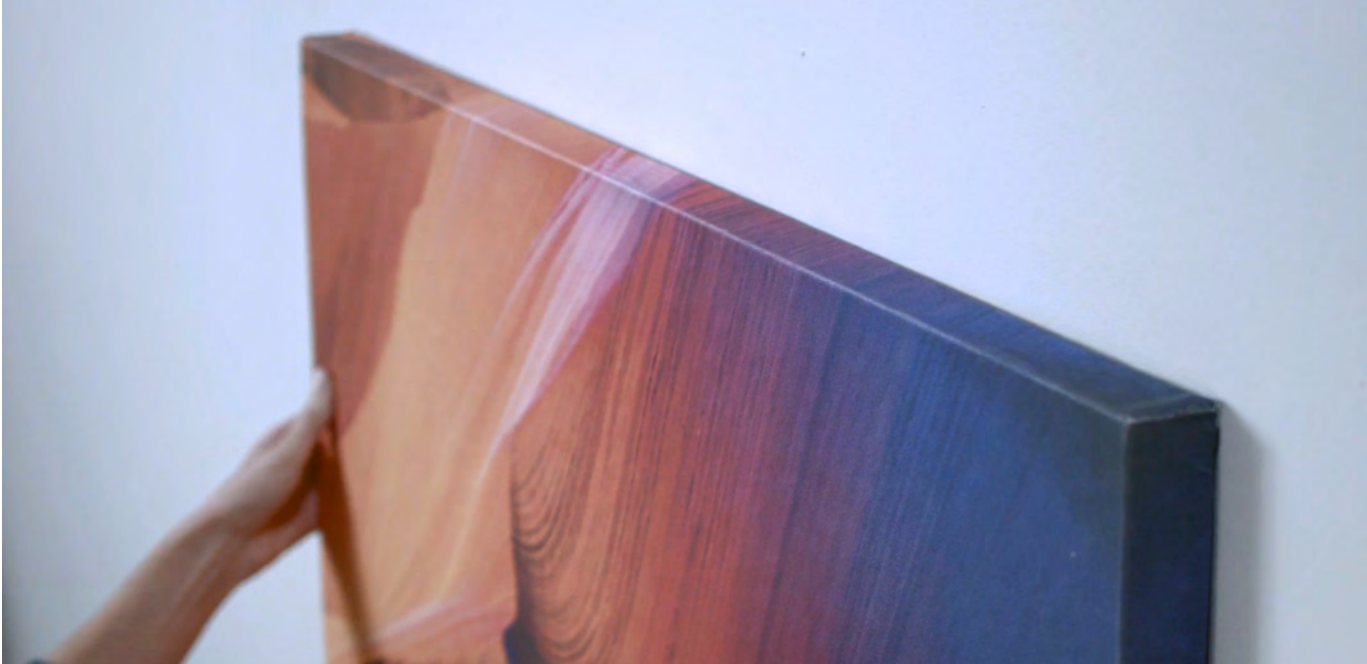


Stacked Method (measuring tape required):

Step 3 (see page 2 for steps 1 & 2): Use Steps 1 & 2 for the first row only. For all panels except for the one(s) for the top row, peel the wax backer off the hang tabs, then place the hang tabs sticky side down on the back of the panel just above the top edge, and secure the tabs with the small screws provided.



For the panel(s) that will be used for the top row, install the hang tabs just below the top edge. Install the hang tabs with equal distances from the top edge of the panel(s).

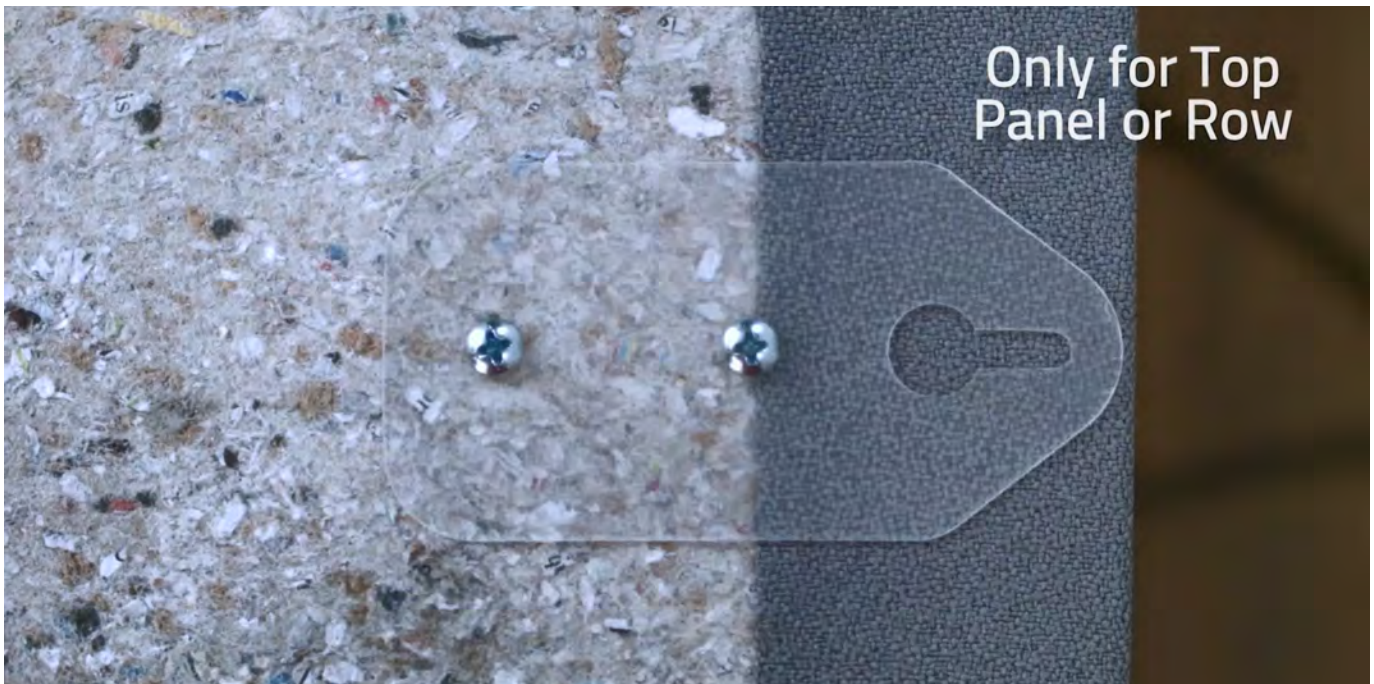

Stacked Method Continued:

Step 4: Place the first panel for the bottom row on the wall, using the level line drawn in Step 2 as a reference to the top of the panel. Screw the Walldog fasteners into the wall through the top of the keyholes in the hang tabs.



Step 5 (optional): For additional panels before the top row, rest the panels on top of the lower row and repeat the instruction in the last sentence of Step 4.



Stacked Method Continued:

Step 6: For the panel(s) for the top row, measure the distance between the keyholes on the hang tabs and the distance from the bottom of the panel(s) to nearly the top of the keyholes on the tabs. Then, apply the same measurements to the wall and mark the locations of where the keyholes will be on the wall with a pencil.



Step 7: For the top panel(s), screw the Walldog fasteners into the wall and make sure to leave a small 1/8" gap for the hang tabs.



Stacked Method Continued:

Step 8: Hang the top row panel(s) on the wall, like you would a wall clock, sliding the keyholes over the screws.

